 


This instruction sheet is relevant to OPTONICA Firesafe Downlight product code: 5044

THANK YOU for buying this OPTONICA product. To help ensure this luminaire gives complete satisfaction please only use it according to the following instructions, and then pass the instructions to the appropriate person for retention and future reference.



Warning

1. Installation only to be carried out by a qualified electrician
2. Please ensure surface is suitable and capable of holding the luminaire and driver weight
3. Pre-cut hole before installation, (see below chart for hole diameter)
4. Do not operate if product is damaged
5. IP65 rated front with bezel, suitable for bathroom zones 1 & 2
6. This product is suitable for fire rated installations, Part L Compliant of UK Building Regulations, Part B Compliant BS476 Parts 21 and 22 – Suitable for 30 minute 600mm/15mm single layer Standard Wallboard, 60 minute 600mm/12.5mm twin layer Fireboard and 90 minute 450mm/15mm twin layer Fireboard ceilings

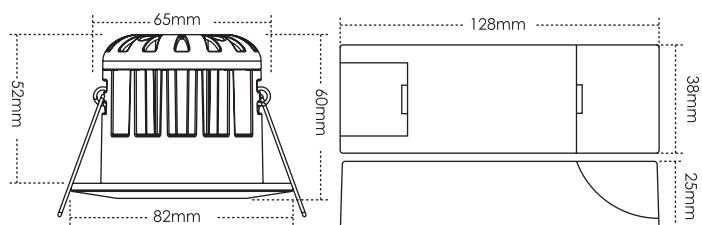

Product code	Power (W)	Colour Temp (K)	Cutout Ø
5044	10	2800, 4500, 6000	67-75

  
1. Switch off power
2. Prepare cut-out hole in your surface to specified dimensions as stated in above table.

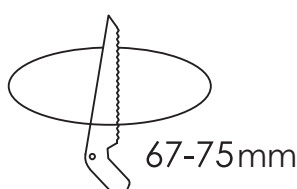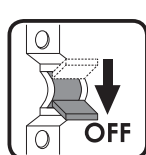


2. Select desired colour output via front mounted switch - WW - 2800K, CW - 4500K, DL - 6000K.



 
3. Remove end cover to reveal push fit loop in/loop out terminal.
4. Connect the driver to mains AC200-240V electricity in accordance with current wiring regulations.

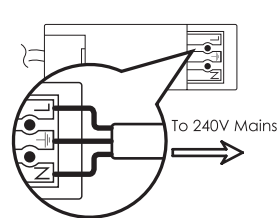

 4. Place driver into recess then push back spring clips and insert luminaire into recess.

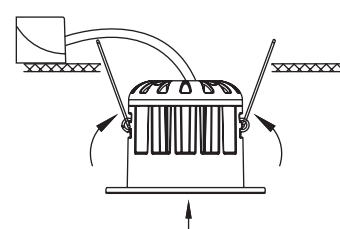

 5. Ensure luminaire is a flush fit and has plenty of ventilation, cover with insulating material.

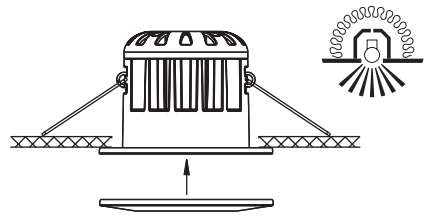

- Place one of the supplied magnetic facias to complete installation

6. Switch power on at circuit

NB. For high voltage circuit insulation testing disconnect mains input supply first (Do not circuit test using a Megger)



Changing Colour Temperature

To change colour temperature after installation



- Ensure power is switched off.
- Remove magnetic bezel and switch to desired colour temperature.

- Replace bezel
- Switch power on at circuit



Images are for information only. OPTONICA shall not be held liable for improper operation of the luminaire in circumstances where procedures and specifications have not been followed correctly.

HU

FELSZERELÉSI ÚTMUTATÓ

A lámpatestet szaképzett villanyszerelő által, az IEC előírásai szerint kell felszerelni.

Tápfeszültség: 230V/50Hz

1. A telepítés megkezdése előtt ellenőrizze, hogy a készülék ki van-e kapcsolva, ill. áramtalanítson a villanyóránál.
2. Kösse a bemeneti betápkábel a lámpatesthez
3. Szigetelje a kötéseket rövidzárlat elkerülése céljából.

Prima Group 2004 Kft. nem vállal felelősséget a szakszerűtlen telepítés esetén

Ez a termék megfelel az alábbi Európai Unió direktívának:

- LVD 2014/35/EU és EMC 2014/30/EU
- EMC irányelv 2014/30/EU

BG

ИНСТРУКЦИЯ ЗА МОНТАЖ

Монтажът на осветителното тяло трябва задължително да се извърши от квалифициран техник.

Захранващо напрежение на осв. тяло: 230V/50Hz

1. Преди да пристъпите към монтажа се уверете, че захранването е изключено.
2. Свържете клемите на входното напрежение на захранването към захранващия кабел от мрежата.
3. Фирма Прима Груп 2004 ООД не носи отговорност за щети, възникнали вследствие на неправилен монтаж.

Настоящият продукт отговаря на изискванията на следните директиви на Европейския Съюз:

- Директива LVD 2014/35/EU
- Директива EMC 2014/30/EU

EN

INSTALLATION INSTRUCTIONS

The installation of the luminaire must be performed by a qualified technician. Supply voltage of the light:

230V/50Hz

1. Before you begin installation, make sure the power is off.
2. Connect the terminals of the input voltage of the power supply to the power cord from the mains.
3. Insulate connections to prevent short circuits

Prima Group 2004 Ltd. is not responsible for damage caused by improper installation. This product complies with the following EU Directives:

- LVD 2014/35/EU
- EMC 2014/30/EU

DE

INSTALLATIONSANLEITUNG

Die Montage der Leuchte muss von einem qualifizierten Techniker durchgeführt werden.

Versorgungsspannung des Lichts: 230V/50Hz

1. Bevor Sie mit der Installation beginnen, stellen Sie sicher, dass das Gerät ausgeschaltet ist.
2. Verbinden Sie die Input Zuleitung des Netzteils mit dem Stromanschluss der Hauptversorgung.
3. Isolieren Sie Verbindungen, um Kurzschlüsse zu vermeiden

Prima Group 2004 Ltd. ist nicht verantwortlich für Schäden, die durch unsachgemäße Installationen verursacht werden. Dieses Produkt entspricht den folgenden EU-Richtlinien:

- LVD 2014/35/EU
- EMC 2014/30/EU

EN: IMPORTER: Prima Group 2004 LTD, Bulgaria, 1784 Sofia, Mladost 1, bl. 144, Ground Floor; Phone: +359 2 988 45 72;

DE: IMPORTEUR: Prima Group 2004 LTD, Bulgarien, 1784 Sofia, Mladost 1, bl. 144, Erdgeschoss; Telefon: +359 2 988 45 72;

BG: ВНОСИТЕЛ: Прима Груп 2004 ООД, България, 1784 София, Младост 1, бл. 144, Партер; Телефон: +359 2 988 45 72;