


# OPTONICA

## PIR motion sensor

SKU: 7319

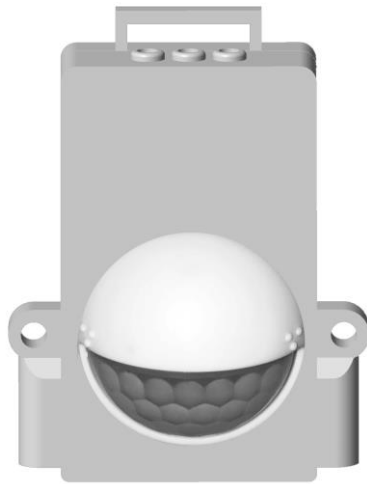

[www.optonicaled.com](http://www.optonicaled.com)

### Welcome to use 7319 infrared motion sensor!

The product adopts good sensitivity detector, integrated circuit. It gathers automatism, convenient safe, saving-energy and practical functions. It utilizes the infrared energy from human as control-signal source, it can start the load at once when one enters detection field. It can identify day and night automatically. It is easy to install and used widely.


Power Source: 220 -240V/AC

Power Frequency: 50Hz/60Hz

Ambient Light: 10-2000LUX (adjustable)

Time-Delay: min: 10sec

max: 7min

Rated Load: 100W for LED or 

Detection Range: 120°

Working Temperature: -20~+40°C

Working Humidity: <93%RH

Installation Height: 1.8m~2.5m

Detection Motion Speed: 0.6~1.5m/s

Detection Distance: 2-10m (<24°C) (adjustable)

### FUNCTION :



- Can identify day and night: The consumer can adjust work ambient light. It can work in the daytime and at night when it is adjusted on the “sun” position (max). It can work in the ambient light less than 10LUX when it is adjusted on the “moon” position (min). As for the adjustment pattern, please refer to the testing pattern.
- Time-delay is added continually: When it receives the second induction signals after the first induction, it will compute time once more on the rest of the first time-delay basic (set time).
- Time-delay adjustment: It can be set according to the consumer’s desire. The minimum time is 10sec. The maximum is 7min.

### INSTALLATION :

- Shut off power.
- Adjust the orientation for detection window of sensor through the adjustable knob in the part of screw socket. You could adjust any orientation for sensor’s detection window where you want to need.
- Connect the power and load wire into connection-wire column according to the connecting figure.
- Put the sensor on the bottom lid, twist the screw tightly then electrify it and test it.

### CONNECTION SKETCH FIGURE :

(see right figure)

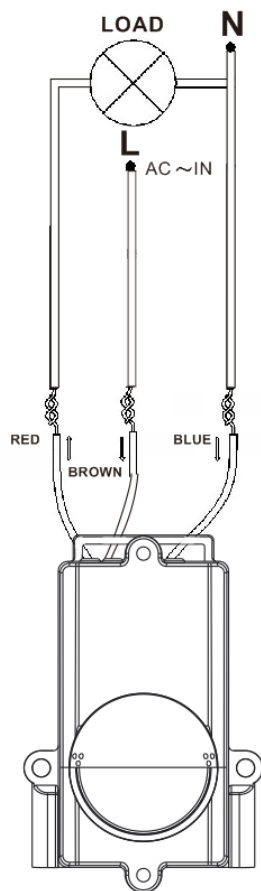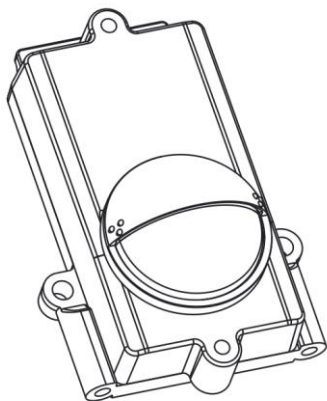

### TEST :

- Turn the SENS knob clockwise on the maximum, turn the TIME knob anti-clockwise on the minimum, turn the LUX knob clockwise on the maximum(SUN).
- When you switch on the power, the controlled load is not working. Preheat 30 seconds later, when the sensor gets the induction signal, the load will be turned on. After the load is turned off, it will be turned on again when the sensor gets induction signal within 5~15 sec.
- After the first is out, make it sense again after 5~10sec. The load should work. When there is no induction signals in the sensor, the load should be stopped working.
- Turn LUX knob anti-clockwise on the minimum. If it is adjusted in the less than 10LUX(dark), the load and sensor should not work when testing in daylight. If you cover the detection window with the opaque objects (towel etc), the load work. Under no induction signal condition, the load should stop working within 5-15sec.

**Note: when testing in daylight, please turn LUX knob to ☀ (SUN) position, otherwise the sensor lamp could not work!**

### NOTE :

- Should be installed by electrician or experienced person.
- Avoid installing it on the unrest object.
- There should be no hindrance and moving objects in front of the detection windows to effect detection.
- Avoid installing it near air temperature alteration zones such as air condition, central heating, etc.
- Considering your safety, please do not open the cover when you find the hitch after installation.
- If there is difference between instruction and the function the product has, please give priority to product and sorry not to inform you additionally.

### SOME PROBLEM AND SOLVED WAY :

- The load do not work:
  - a. Please check if the connection-wiring of power and load is correct.
  - b. Please check if the load is good.
  - c. Please check if the working light sets correspond to ambient light.
- The sensitivity is poor:
  - a. Please check if there has hindered in front of the detection window to effect to receive the signal.
  - b. Please check if the ambient temperature is too high.
  - c. Please check if the induction signal source is in the detection fields.
  - d. Please check if the installation height corresponds to the height showed in the instruction.
  - e. Please check if the moving orientation is correct.
- The sensor can not shut off the load automatically:
  - a. Please check if there is continual signal in the detection field.
  - b. Please check if the time delay is the longest.
  - c. Please check if the power corresponds to the instruction.
  - d. Please check if the temperature near the sensor changes obviously, such as air condition or central heating etc.

