OPTONICA

INSTALLATION & OPERATING INSTRUCTIONS

LED ECO. NEW

LED SOLAR LAMP

OUTDOOR ILLUMINATION

Pillar installations

- 3 CCT changing
- Remote controller















Remote controller

• Different mode choices

ITEM NO.	SOLAR PANEL	ВАТ	LUMEN	сст	FUNCTION	IP	COLOR
9351	1.8W Poly	1200mAH	70lm	3000+4000+6000K	Dimmable	IP54	Black


OPTONICA

INSTALLATION & OPERATING INSTRUCTIONS


Installation

LED SOLAR LAMP

Pillar installation

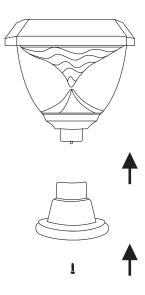

Remote Controller

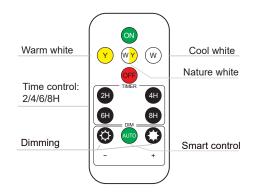

"-" and " +":

Dimming: 4 levels 25/50/75/100%

2/4/6/8H:

First, turn on "ON", then set up 2/4/6/8H. It will turn off after time up.

ATUO:

Smart control: It can continuous light on at night.

Safety Instructions



- Pls make the lamp full charge before using.
- Ensure that the lamp mounting location is free from occlusion and can be fully exposed to sunlight.
- The lighting effect is different depending on different seasons, times and mounting location.
- Do not expose the lamp to fire or intense heat.
- Do not immerse the lamp into water.
- There's some difference in lithium battery capacity during summer and winter.
- Under optically control, the lamp will automatically recharge by solar panel during daylight and turn on automatically at night.