

OPTONICA

PORTABLE PARTY BLUETOOTH SPEAKER

USER MANUAL

PRODUCT FEATURES

- Portable Party Bluetooth Speaker
- Built-in-Bluetooth
- Multi-functional speaker-supports USB flash drive, Micro SD card, Bluetooth, FM radio, AUX jack & Microphone input
- Built-in rechargeable battery
- USB recharge cable included

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
- Do not use the unit if it has been dropped or damaged in any way
Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk
- Do not use the unit with wet hands
- Do not put objects into any of the openings
- Keep the unit free from dust, lint etc
- Do not use this unit for anything other than its intended use
- Keep the unit out of reach of children
- The unit is not a toy

1. NEXT: Short press one song. Long press fast forward;
PREV: Short press the last song. Long press fast rewind;
2. Play pause. Radio automatic search station
3. "M" Press the mode switch button. Long press for switch light
4. TREBLE: Rotate to the right to increase the treble
5. BASS: Rotate to the right to add bass
6. ECHO: The reverb of the mic
7. MIC. VOL: Mic volume
8. With Microphone Input Jack
9. TF card, USB disk playback, support Mp3 and other audio source formats

INSTRUCTIONS FOR USE

Charging the Portable Party Bluetooth Speaker With LED Lights

For best results, fully charge the unit before use.


1. Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Charging Indicator turns RED while charging, and turns off when fully charged.

NOTE: Before using the unit for the first time, please charge it for around 3-4 hours or until the charging indicator turns off.

TURN ON/OFF THE SPEAKER

Rotate the power knob from OFF position to ON position to turn on the unit with colour changing LED light, or rotate to OFF position to turn off the unit.

CONTROL MODE

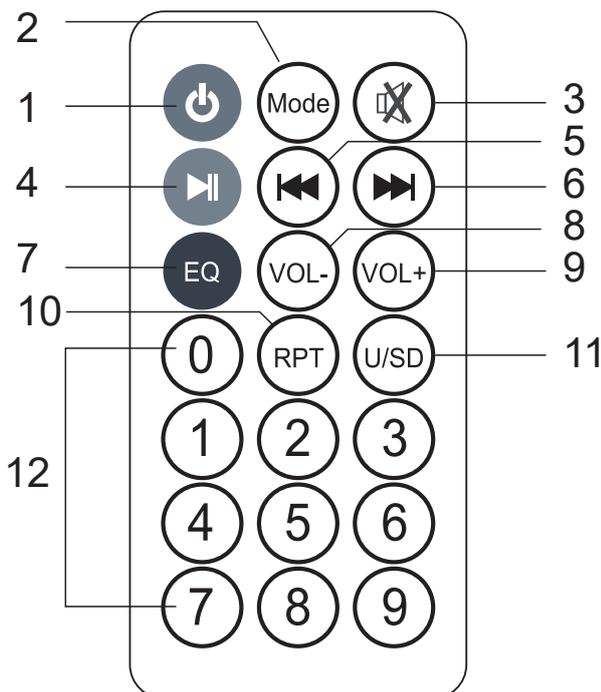

1. ON/OFF
2. MODE(USB/TF/FM/BT/LINE-IN)
3. MUTE
4. PAUSE/PLAY
5. PREV
6. NEXT
7. EQ
8. VOLUME -
9. VOLUME +
10. REPEAT
11. USB/TF
12. 0-9 NUMBER SELECTION